ARAT Telephone mount

Car Manufacturer: Chrysler

Type: Voyager, 2001 model onwards

Part No: 1034.3

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

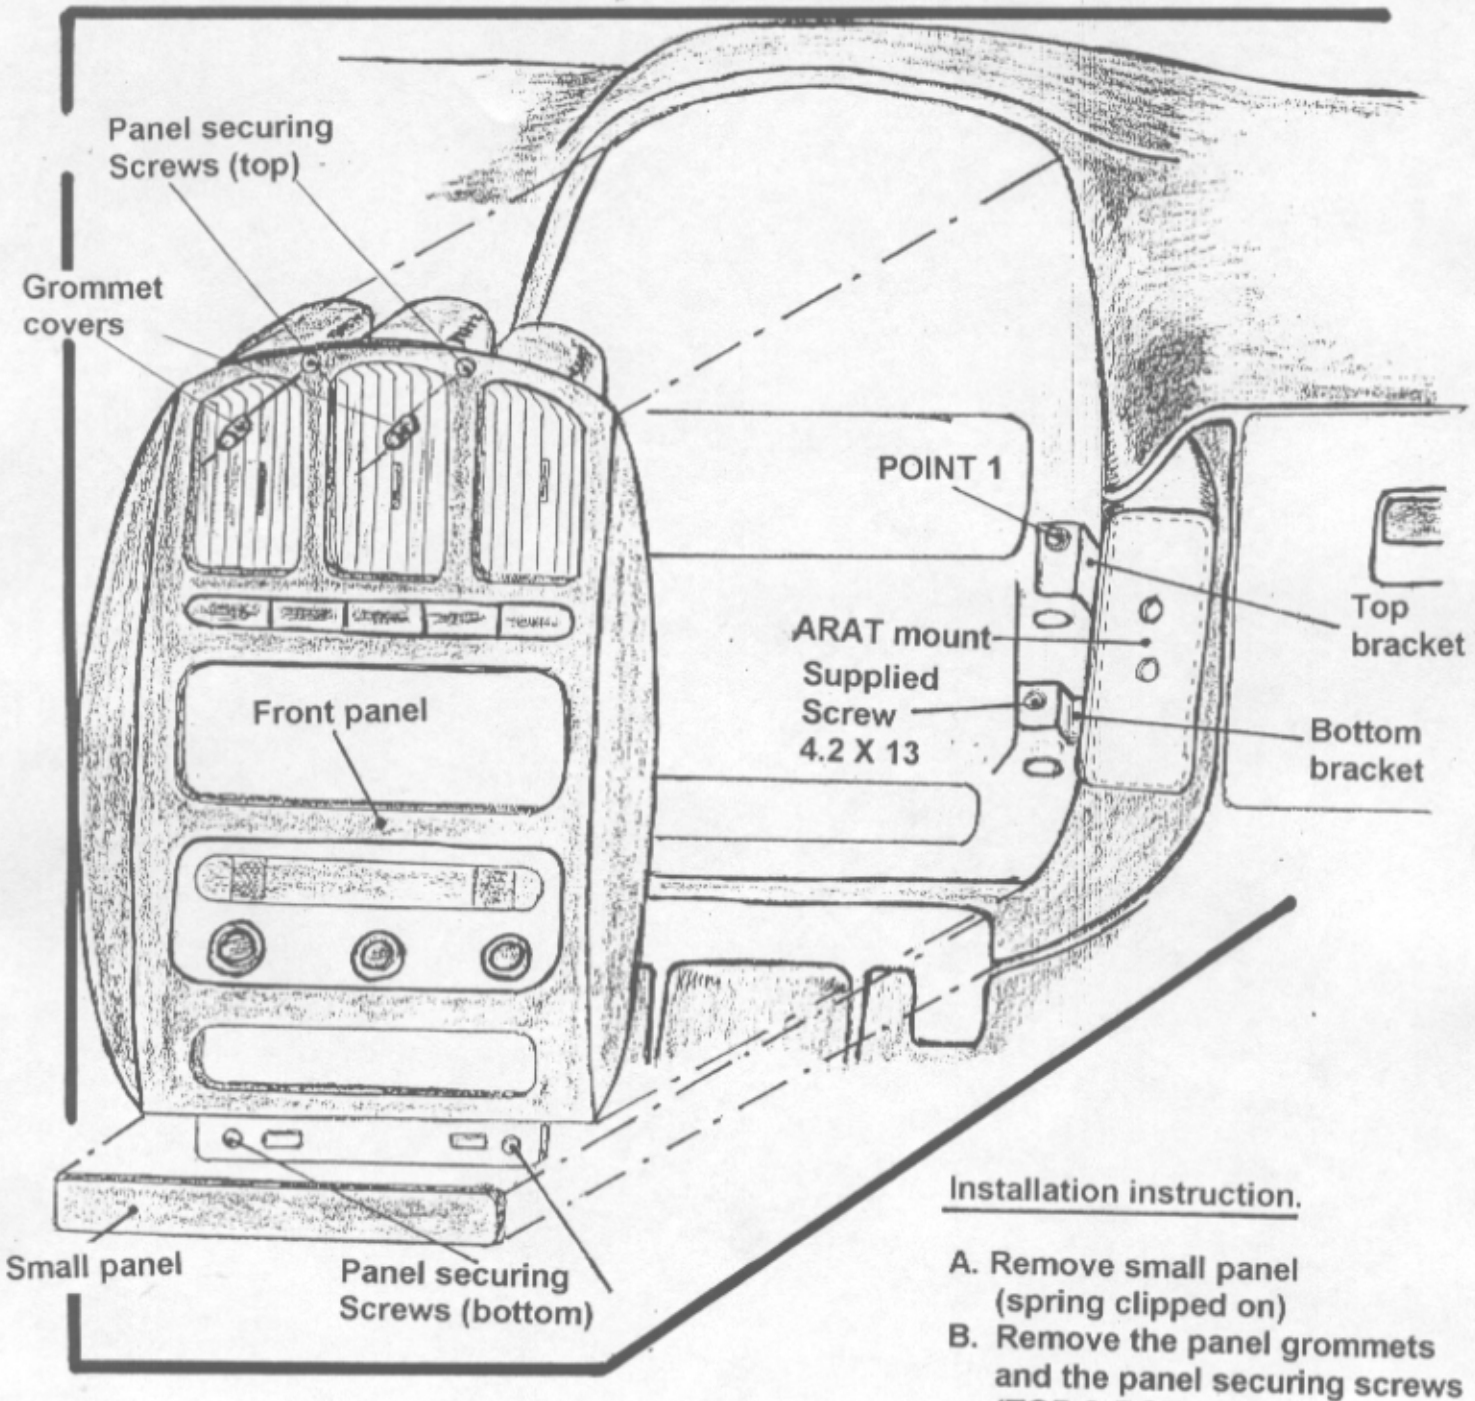

Installation instruction.

A. Remove small panel (spring clipped on)
B. Remove the panel grommets and the panel securing screws (TOP & BOTTOM)
C. Remove the front panel from its spring clips
D. Remove the screw at POINT 1 and place the ARAT mount to the contours of the dashboard, the screw at POINT 1 through the top bracket and the bottom bracket secured with the supplied screw into the dashboard material replace the panels and grommets